


CODING NEW STYLE TRANSMITTERS

This instruction sheet applies to transmitters marked with a circle and triangle or units bearing the Forge Leisure Logo.



1. Locate receiver unit. This is identified by a white plastic enclosure (4 ½ " x 6 ") fitted with a black socket on the top and bottom (for use with the yellow pendant) or two green push buttons and a Keyswitch.
2. Remove lid of receiver unit and temporarily screw top right screw into bottom left hole to support any wiring.
3. Locate switch SW1 or PINS on the PCB (as shown on the attached diagram) and press (or bridge if PINS) once. Red LED will illuminate.
4. Press a button on the transmitter. Red LED will extinguish.
5. Press the transmitter button once again. Red LED will flash.
6. Once LED stops flashing, wait 30 seconds. Transmitter is now programmed for use.
7. Repeat steps 3 – 6 for additional transmitters.



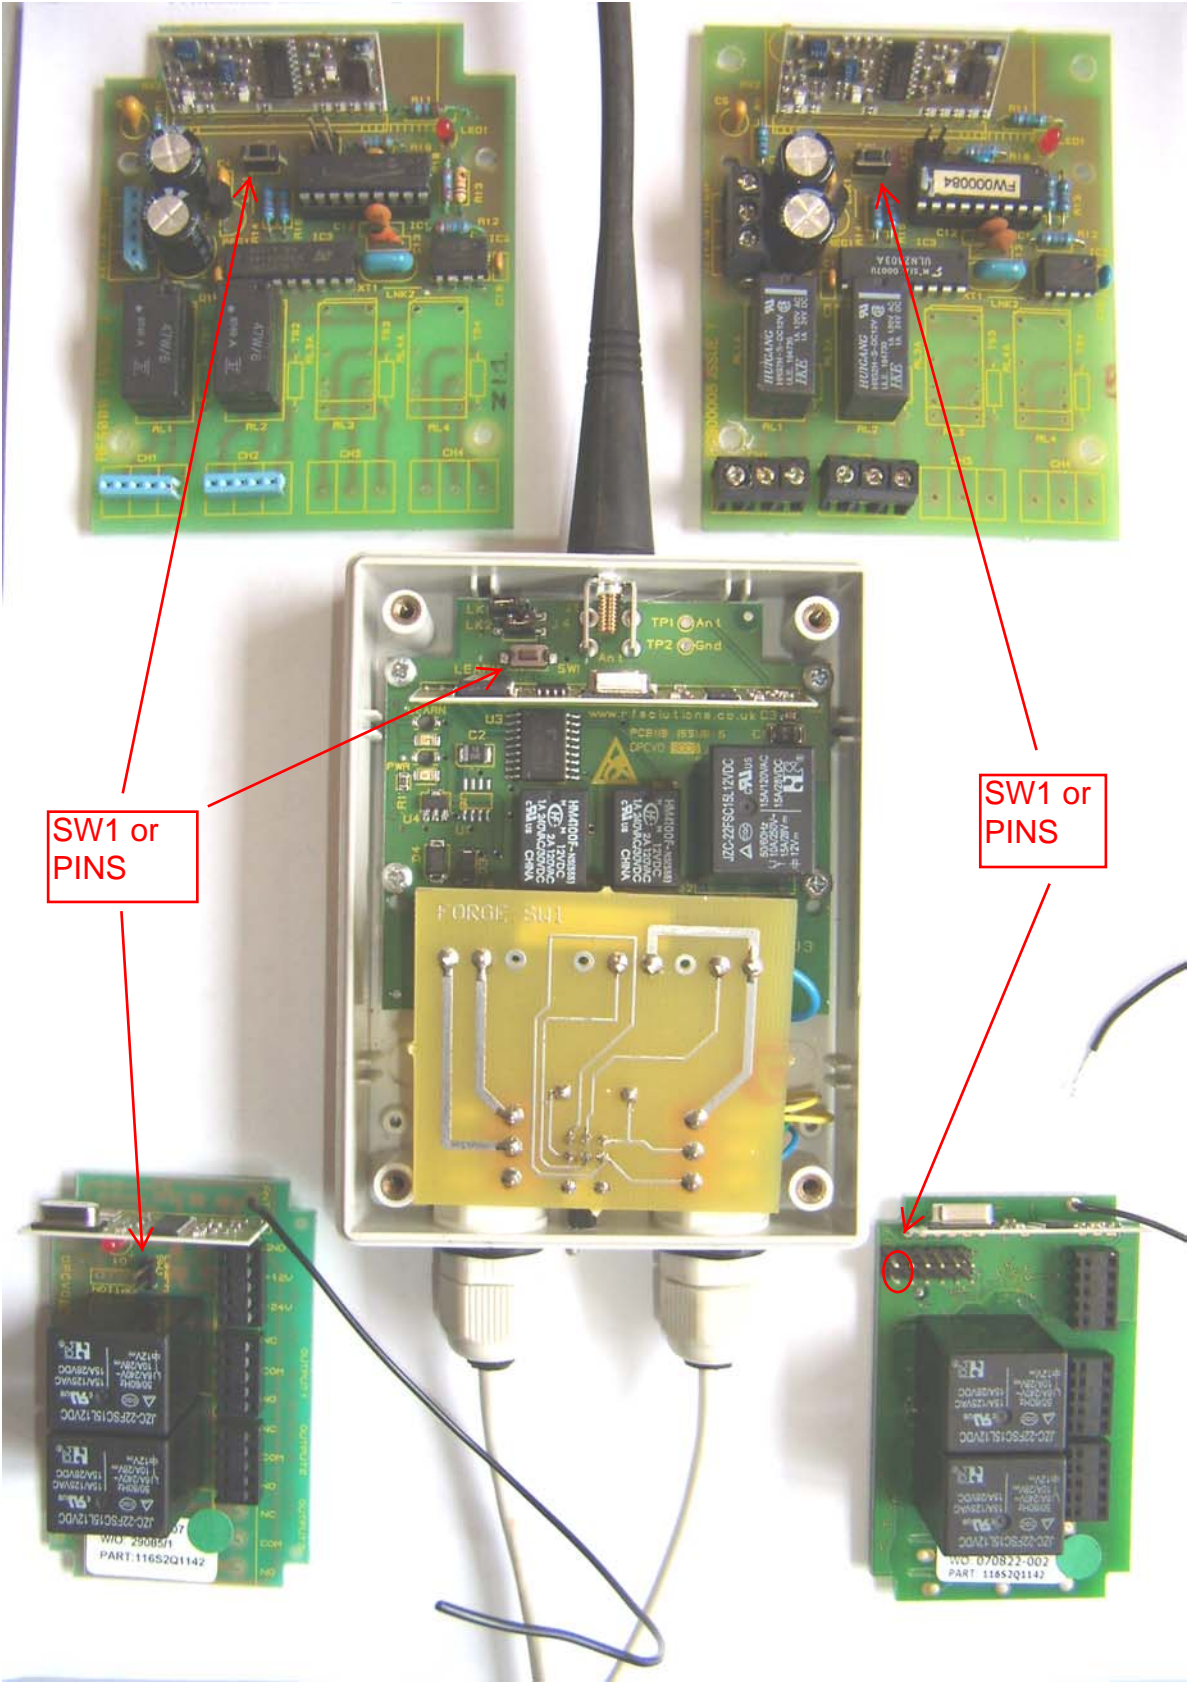

SW1 or PINS

SW1 or PINS

www.factionone.co.uk
FORGE SUI
PCB08 JS2011 5
DPCV0 8889

J2C-22FSC18L17V0C
J2C-22FSC18L17V0C
J2C-22FSC18L17V0C
W/O: 2900551
PART: 11652Q1142

J2C-22FSC18L17V0C
J2C-22FSC18L17V0C
J2C-22FSC18L17V0C
W/O: 070822-002
PART: 11652Q1142