



FORGE INDUSTRIAL CENTRE, MORPETH ROAD, ASHINGTON, NORTHUMBERLAND NE63 8QG

TEL: 01670 522022 FAX: 01670 522072

www.forgeleisure.co.uk email: enquiries@forgeleisure.co.uk

MOTORISED POOL COVER INSTRUCTIONS

CONTROLS

Use the keyswitch to isolate the pool cover controls when not in use.

Press 'cover out' on remote transmitter (or push button station) once to start the motor to deploy the cover and press once again to stop the motor.

Press 'cover in' on remote transmitter (or push button station) once to start the motor and retrieve the cover and press once again to stop the motor.

METHOD OF OPERATION

1. Empty pool of all swimmers.
2. Remove all lane ropes and fixings and where possible steps, lifting aids etc.
3. Attach guide rails to stainless steel wall brackets, ensuring opposite end is located on the pool edge.
4. Turn keyswitch to the on position.
5. Deploy cover and stop when it reaches hand height.
6. Untie towropes and attach lanyard to the stainless steel ring.
7. Walk to the centre of the opposite end of the pool with the lanyard and remote transmitter.
8. Deploy pool cover, keeping lanyard taught allowing cover to slide down the guide rails.
9. Stop motor once cover is fully deployed.
10. Turn keyswitch to the off position.
11. Remove and store lanyard.
12. Remove and store guide rails.
13. To retrieve cover, turn keyswitch to the on position.
14. Start motor, remaining on poolside at all times.
15. Stop motor once cover reaches hand height and tie towropes.
16. Re-start motor and stop once leading edge reaches 1'O' clock position.
17. Turn keyswitch to the off position.

CLEANING

All exposed stainless steel should be cleaned with a proprietary cleaner every 3 months or as required.



Registered in England and Wales, No. 6259422

Registered Office: Victoria House, Bondgate Within, Alnwick, Northumberland NE66 1TA.